



# XPS DIYAGRAM

# XPS DIYAGRAM

1 RECEIVER MAIN BODY	30 SLIDE PLATE RIGHT	59 GAS CHAMBER PIN 1
2 MAGAZINE	31 SLIDE PLATE LEFT	60 GAS CHAMBER PIN 2
3 MAGAZINE FLOOR PLATE LOCK	32 GUIDE ROD HOUSING	61 HOUSING PIN
4 MAGAZINE FLOOR PLATE	33 MECHANISM END	62 FRICTION STAMP 6
5 FOLLOWER	34 MECHANISM	63 FRICTION STAMP 7
6 FOREND	35 MECHANISM REAR	64 FRICTION STAMP 4
7 STOCK	36 MECHANISM FRONT	65 FRICTION STAMP 8
8 BUTT PAD MOUNTING PART	37 MECHANISM LONG PIN	66 FRICTION STAMP 3
9 PISTOL GRIP	38 EXTRACTOR PIN	67 FRICTION STAMP 1
10 PISTOL GRIP LATCH	39 EXTRACTOR SPRING	68 PISTOL GRIP PLATE
11 BUTT PAD	40 BARREL	69 TRIGGER GUARD LOWER
12 SWIVEL WASHER	41 FRONT NEEDLE	70 TRIGGER GUARD NUT
13 SCOPE RAIL ADAPTER	42 DISCONNECTOR	71 TRIGGER GUARD SCREW
14 REAR FIRING NEEDLE	43 PLATE BLANKING PLUG	72 TRIGGER GUARD
15 FRONT SIGHT	44 TRIGGER LEVER PIN	73 FOREND SWIVEL MOUNTING PLATE
16 MANUAL BOLT CATCH	45 TRIGGER LEVER SPRING	74 FOREND SWIVEL MOUNTING LOWE PLATE
17 SHIELD HOLDER	46 TRIGGER PIN	75 FOREND SWIVEL
18 STOCK CONNECTION PART	47 TRIGGER SPRING BLOCK	76 STOCK SWIVEL
19 GAS PISTON BEARING BODY	48 TRIGGER SPRING	77 STOCK SWIVEL WIRE
20 BARREL BEARING BODY	49 TRIGGER	78 SWIVEL MOUNTING PLATE
21 HOLDER FOR EJECTOR AND MAGAZINE RELEASE	50 EJECTOR	79 TRIGGER LEVER
22 GAS PIPE	51 UPPER SHIELD LEVER	80 SWIVEL
23 GAS CHAMBER	52 DUST COVER	81 FLASH HIDER
24 GAS HOLDER SCREW	53 DUST COVER INNER RING	82 REAR TRIGGER
25 GAS PISTON	54 UPPER SHIELD	83 GRIP SUPPORT
26 REAR SIGHT	55 REAR LEVER PIN	84 TRIGGER PLATE
27 HAMMER SPRING	56 HAMMER	85 OPERATING HANDLE
28 INNER PIN	57 FRICTION STAMP 1	86 OPERATING HANDLE SCREW
29 NEEDLE SPRING	58 FRICTION STAMP 2	87 MAGAZINE SPRING